
KARTNERS


HAMBURG COLLECTION

SINGLE SHOWER DOOR HANDLE 4407506/7508/7512/7518/7524

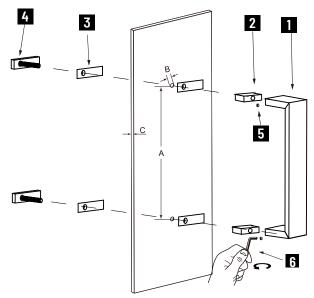


- 1.Handle A
- 2. Fixing Bracket x 2
- 3.Clear Gasket x 4
- 4.End Cap x 2
- 5.Set Screw M5 x 2
- 6.Allen Key 2.5mm x 1


^	GLASS INFO			
		А	Glass Hole C-C Distance	
			6"/152mm	6"Shower Door Handle
			8"/203mm	8"Shower Door Handle
Glass			12"/305mm	12"Shower Door Handle
1			18"/457mm	18"Shower Door Handle
			24"/610mm	24"Shower Door Handle
		В	3/8"(10mm)	Glass Hole Diameter
		С	6-12mm	Glass Thickness

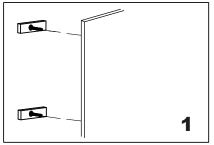


Install the end caps "4" (bolt) through the glass holes,make sure the rubber gaskets are between handle&glass.

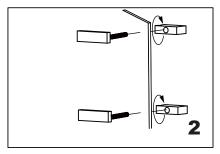

Screw in the fixing brackets into the bolts.

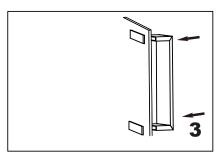

Add the handle A onto the fixing brackets, make sure the set screws holes in the bottom.

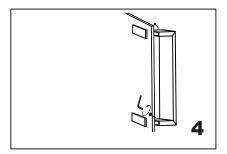

Fix the set screws on the handle, tighten it to avoid loose from fixing brackets.