


INSTALLATION INSTRUCTIONS

M1-4533


SHOWER SLIDING RAIL

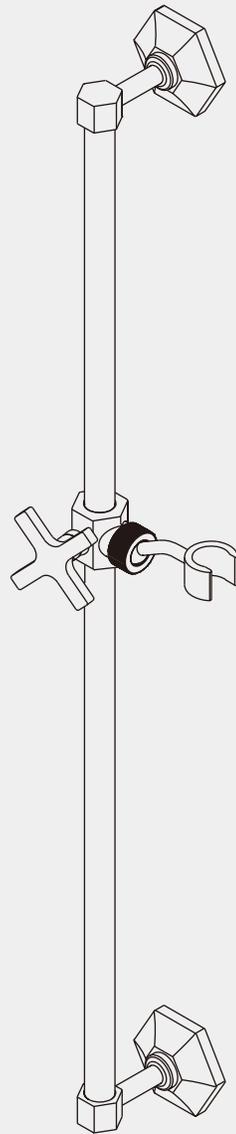

LEFROY BROOKS

Dimensions in Inches (& Millimetres)

M1-4533

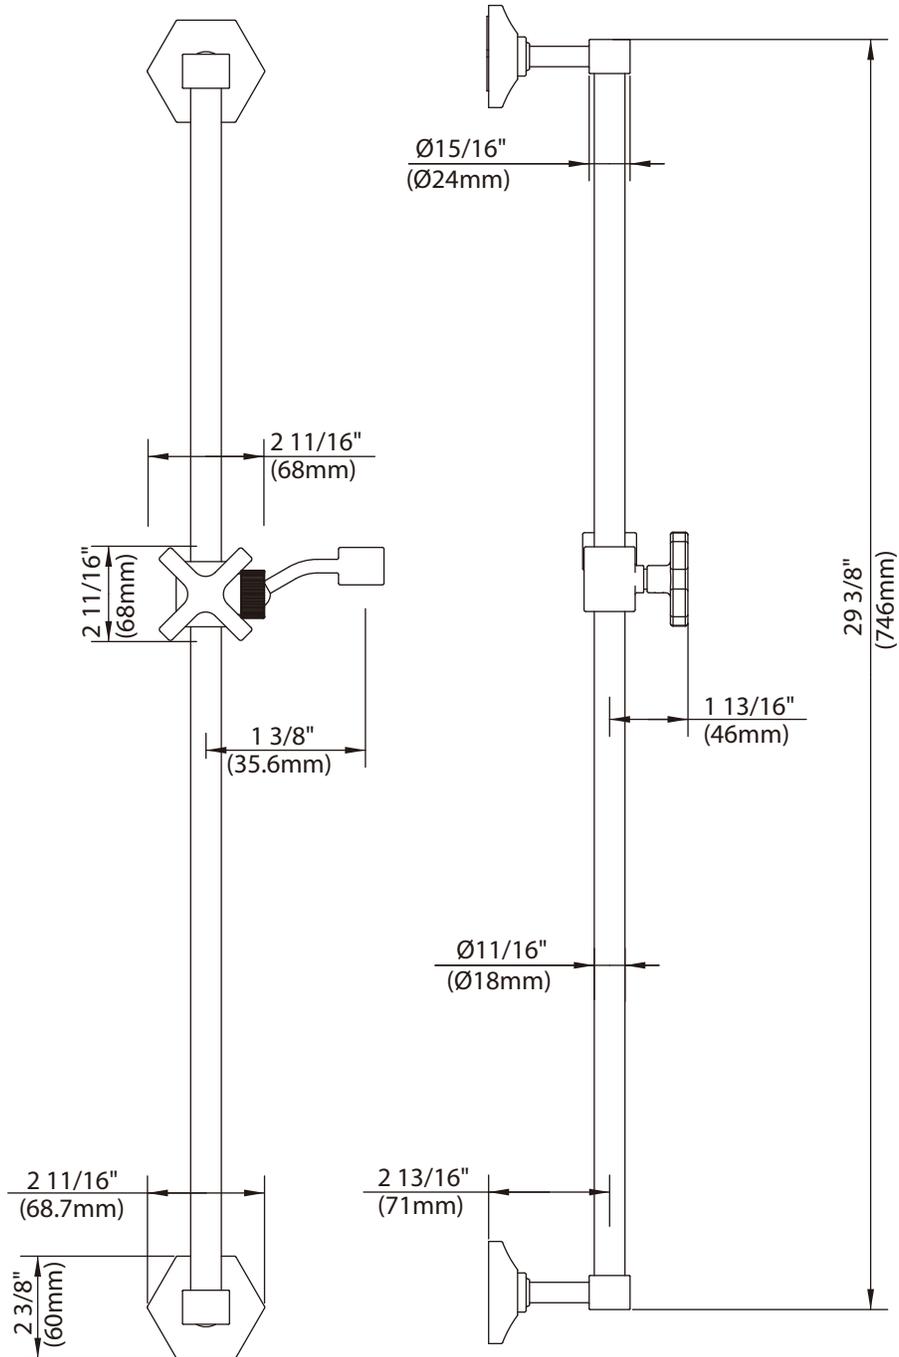


Whilst every effort is made to ensure accuracy, design and dimensions are subject to change without notice as part of the company's product development process.

What you need to know

Tools:

Adjustable Wrench
Groove Joint Pliers
Hacksaw
Phillips Screwdriver
Pipe Tape
Spatula
Spirit Level

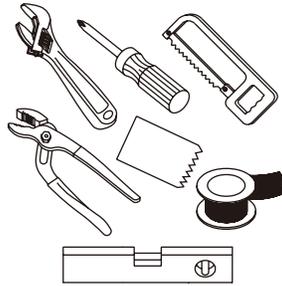

Maintenance

Your new bathroom faucet is designed for years of trouble-free performance.

Keep it looking new by cleaning it periodically with a soft cloth. Avoid abrasive cleaners, wire wool and harsh chemicals as these will dull the finish and void your warranty.

Safety Tips

If you are soldering during faucet installation, remove cartridges, seats, gaskets and washers prior to applying flame, otherwise you will void the warranty.

Cover drain openings to avoid losing small parts.

When cutting or soldering pipe, use safety glasses to protect your eyes.

Important Points

Prior to beginning installation, turn off the cold and hot water lines and open the old faucet to release built-up pressure.

Overtightening nuts may cause damage.

Wrap all threaded connections with pipe tape available at your local plumbing supply store. Always wrap in a clockwise direction. The fittings should be installed by a state-licensed plumber.

Things You May Need

Correct installation may vary depending on previous faucet installation. All necessary supplies required for faucet installation are not included, but may be found where plumbing supplies are sold. It is suggested that IAPMO and/or CSA approved plumbing supplies are used during installation.



Standards

Meets A112.18.1

Steps 1-2

Installation Procedure

Lefroy Brooks always recommends that plumbing products be installed by a licensed professional. Shut off main water supply before installation.

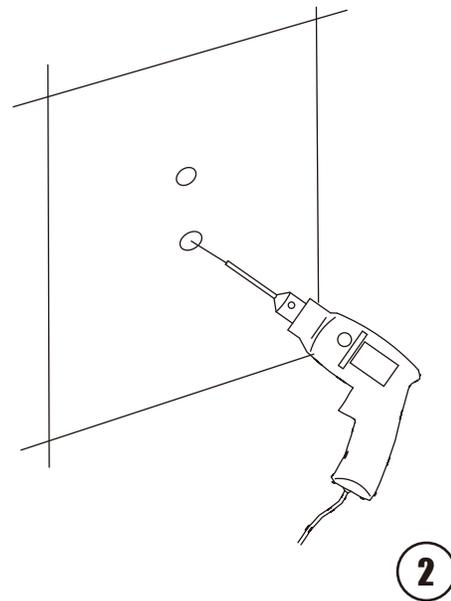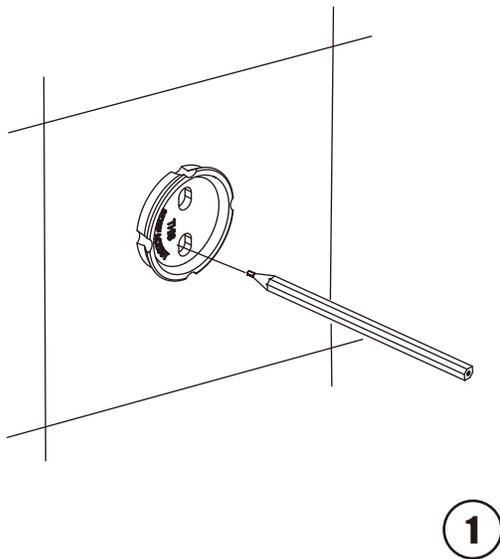



1 Locate the wall bracket where you want to install the sliding rail and mark for the four screw holes.

2 Using the drill bit, carefully drill the four holes.
Tip: install one post, then assemble slide bar to confirm hole position of second post before drilling.

Steps 3-4

Installation Procedure

Lefroy Brooks always recommends that plumbing products be installed by a licensed professional. Shut off main water supply before installation.

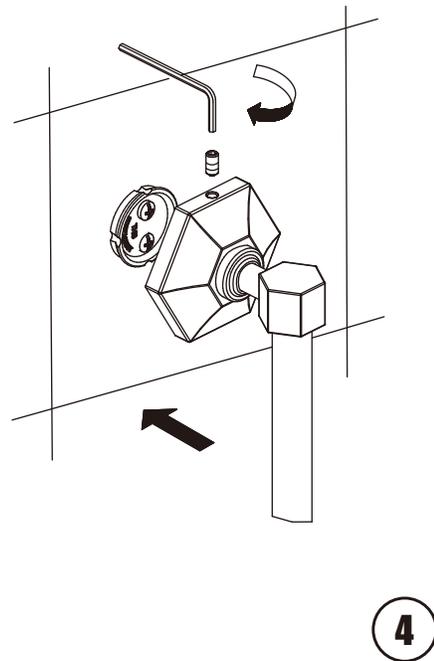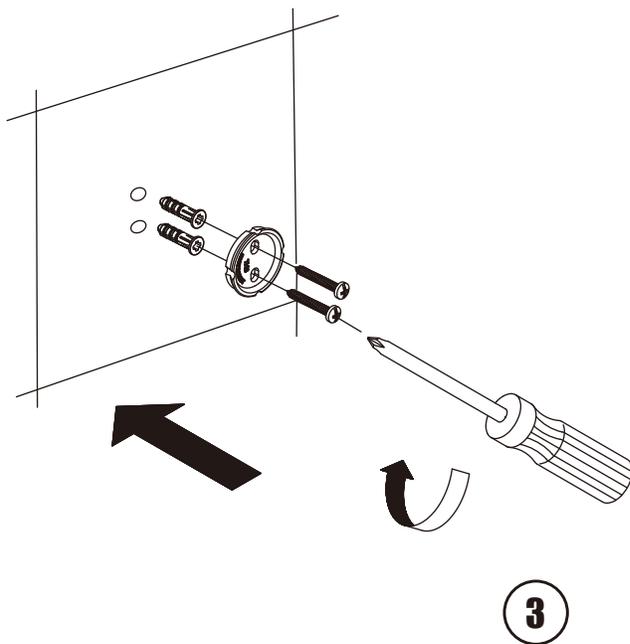


3 Insert the plastic anchor bolts into the four holes. You may need to lightly tap them into position with a hammer. Attach the wall bracket in place and secure it with screws provided.

4 Attach the side bracket onto the wall bracket and tighten with set screw.

Exploded View

Parts List

M1-4533

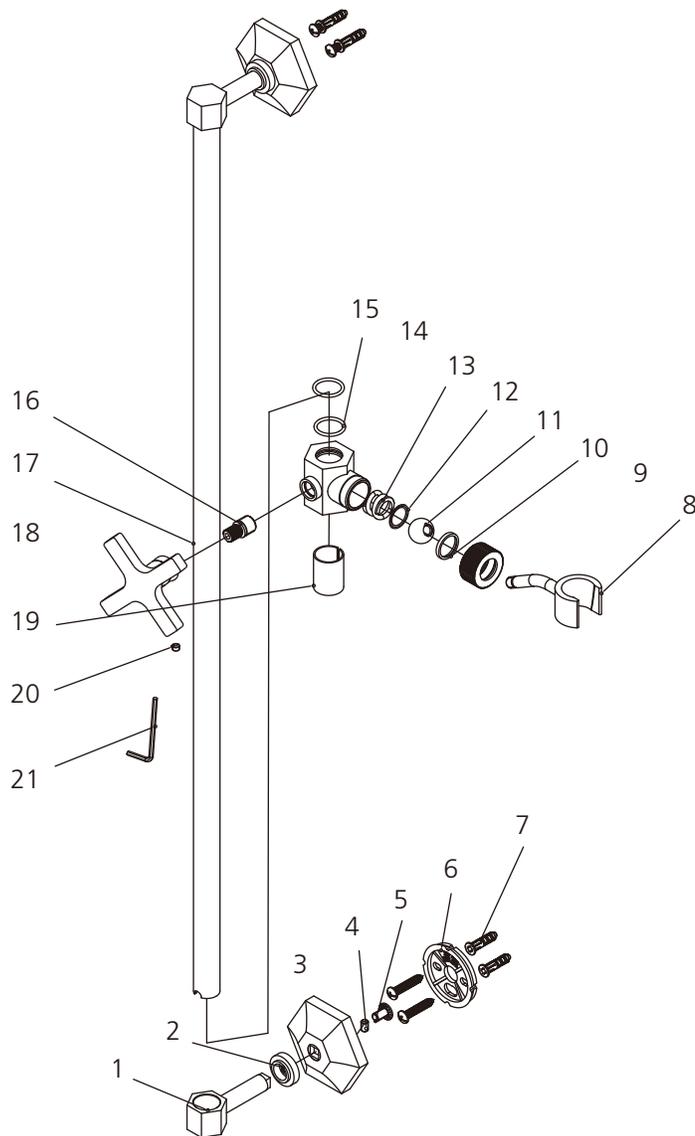

1	Side bracket (117004)	8	Shower bracket (117003)	15	O-ring (004074N)
2	Decorative ring (243190)	9	Nut (009317)	16	Adaptor (067445)
3	Base (241682)	10	Washer (060023)	17	Brass tube (020982)
4	Set screw (075039)	11	Ball joint (067444)	18	Handle (029685)
5	Screw (008711)	12	Washer (013614)	19	Fixer (126099)
6	Mounting bracket (293190)	13	Spring (005156)	20	Set screw (292598)
7	Fixing kit (290411)	14	Seat (126098)	21	Allen key (031000)

For additional assistance or service call

718-302-5292

9am to 5pm EST Monday to Friday



LEFROY BROOKS

www.lefroybrooks.com

LEFROY BROOKS INC, 1828 TROUTMAN STREET, RIDGEWOOD, NY, 11385
TELEPHONE: 718-302-5292. FAX: 718-302-4177

The use of trademarks, product design and artwork is subject to licence or agreement with LBIP Ltd. The design registrations, trademark registrations and copyrights are protected by law and the use or reproduction outside the terms of an agreement is prohibited. The right to modify designs and dimensions is reserved. Christo Lefroy Brooks is a member of ACID (Anti Copying in Design).

© LBIP LTD 2012