





TUBULAR ENTRY SET

1. Door Prep • Prepare la Puerta

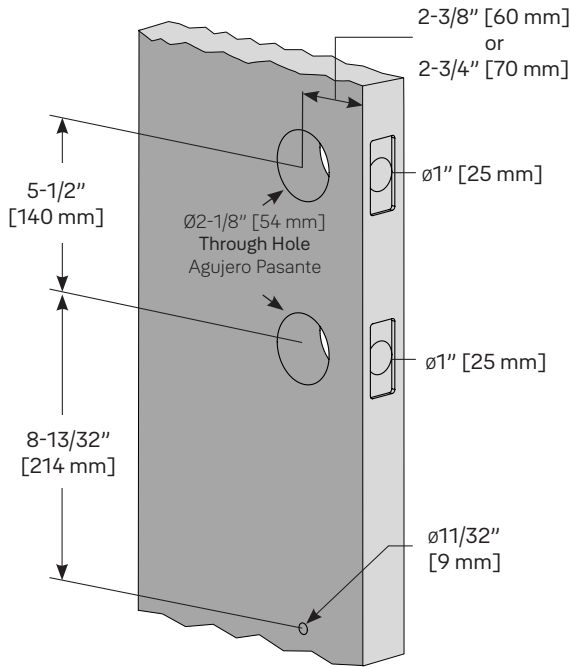


2. Select Proper Backset • Seleccione distancia apropiada


DEADBOLT LATCH
PESTILLO CERROJO

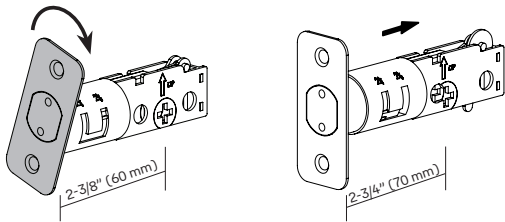


PASSAGE LATCH
PESTILLO PASAJE

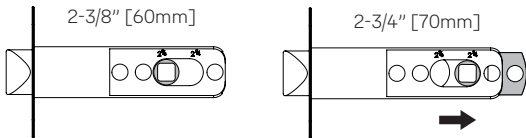


3. Install the Latch, Strike, and Dust Box • Instale el pestillo, las placas, y caja antipolvo

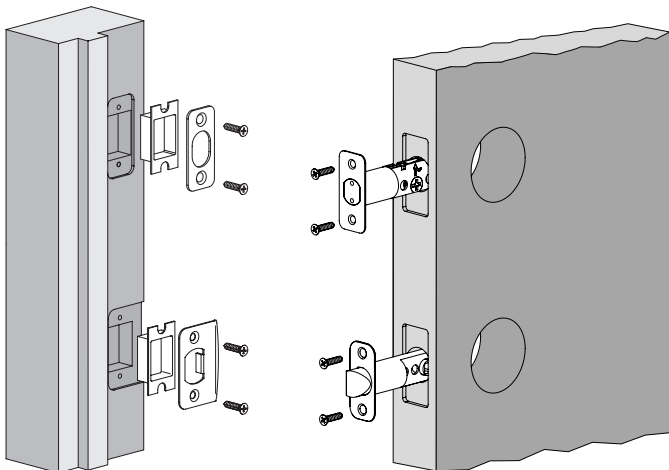

4. Install Deadbolt • Instale el Cerrojo

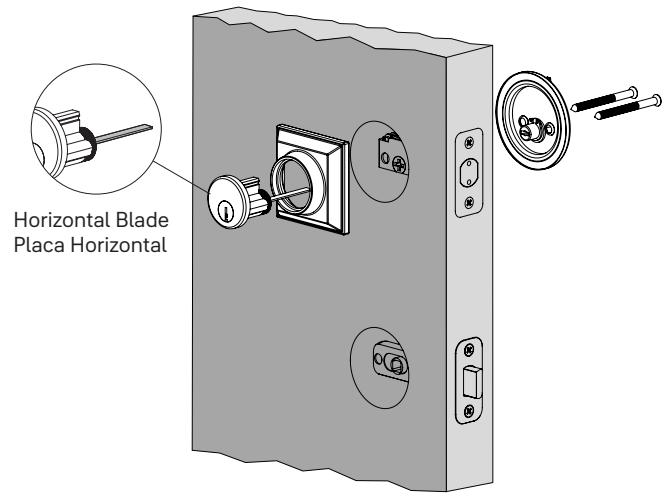

5. Install Exterior Handle and Interior Knob/Lever • Instale la manija y la perilla/manija interior

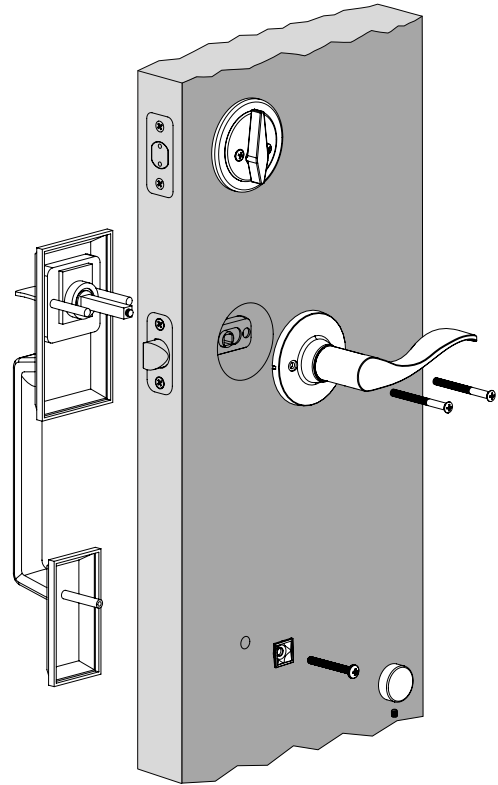

600 Baldwin Park Blvd., City of Industry, CA 91746
yalehome.com 1-800-356-2741

© Copyright 2020. All rights reserved.
Reproduction in whole or in part without the
express written permission of ASSA ABLOY
Residential Group is prohibited.